

# Warmup S-Series 4 Zone Control Centre



## Reliable zone control

Reliable zone control for up to 4 zones, connecting room thermostats to their actuators

## LED indicators

Actuators states (Open / closed) are indicated by green LED's, boiler and pump states (On / Off) by red LED's.

## Easy assembly

Can be easily DIN rail or wall box mounted, installed above the manifold

## Additional zones

An additional 4 zones can be added by installing the 4-Zone Slave unit (*WHS-S-SLV4Z*)

## Overview

The S-Series 4-Zone Control Centre is designed to work with our 6iE, Element, tempo and S-Series range of thermostats and your heat source, i.e. boiler.

The wiring centre can control up to 4 zones and connects room thermostats to their corresponding actuators. Additional zones can be added using the S-Series 4-Zone slave units.


When the wiring centre is in operation, 230V output will switch relevant zone actuators, underfloor heating pump and valve on. Each zone is indicated by individual LED's on the control centre.

The control centre can be mounted directly on a wall or on a DIN-rail.

# Technical specifications

S-Series 4-Zone Control Centre	
Product code	WHS-C-B-MASTER01 (P-2216)
Operating voltage	230 VAC +/- 10%
Degree of protection	Class I
IP Rating	IP20
Operating temperature	0 - 50°C
Outputs	Relay: 2 free contact Max. 3A 250VAC Relay 1 - 230V Switched Live to zone valve and pump Relay 2 - 230V Switched Live or volt-free switch to boiler
Max. total load	5A
Overload protection	5A (Use external 5A MCB's, RCBO's or fuses for this purpose)
Standards	BS EN 60730-1
	BS EN IEC 60730-2-9
	BS EN IEC 61000-6-1
	BS EN 61000-6-3
Warranty	2 years

# Dimensions

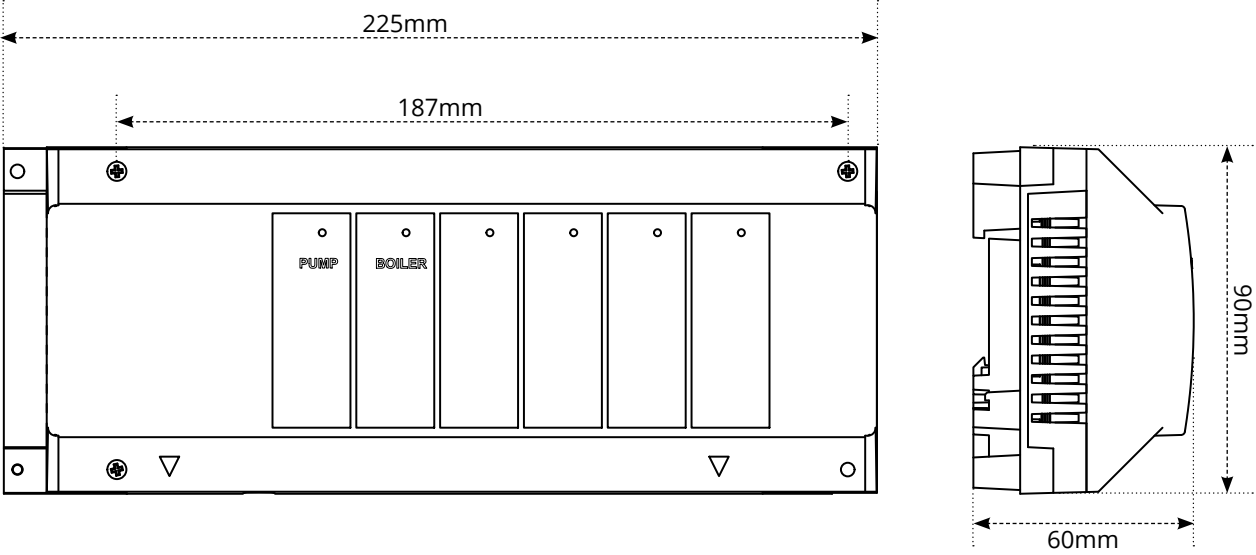

# Contact

**Warmup plc**  
www.warmup.co.uk T: 0345 345 2288  
uk@warmup.com F: 0345 345 2299

**Warmup plc** ■ 704 Tudor Estate ■ Abbey Road ■ London ■ NW10 7UW ■ UK  
**Warmup GmbH** ■ Ottostraße 3 ■ 27793 Wildeshausen ■ DE